



# Tinytalk Internal Temperature (-40 to +85°C)

TK-0014

**Issue 8** 7th April 2006 E&OE Tinytalks are compact, lightweight, economical loggers housed in a 35mm film canister.

These loggers are used in a wide range of applications including fridge monitoring, building condition monitoring and academia.

The TK-0014 is self contained with an internal temperature sensor.

# **Popular Applications**

- Building condition monitoring
- Pharmaceutical storage
- Dry food storage
- Museum display and repository





#### **Features**

- Temperature recorder
- 1,800 reading capacity
- User-programmable logging interval
- 3 stop options
- Splash proof case
- User-replaceable battery

















# **Tinytalk Internal Temperature** (-40 to +85°C)

TK-0014

**Issue 8:** 7th April 2006 (E&OE)



## **Features**

Stop Options

**Total Reading Capacity** 1,800 readings Memory type Non Volatile **Delayed Start** Relative / Absolute (up to 45 days)

When full

After n Readings

Never (overwrite oldest data)

1 sec to 4.5 hours Logging Interval Offload While stopped


# **Reading Specification**

Reading Range -40°C to +85°C (-40°F to +185°F)

10K NTC Thermistor Sensor Type (Internally mounted)

Response Time 40 mins to 90% FSD in moving air

#### Reading Resolution and Overall Accuracy

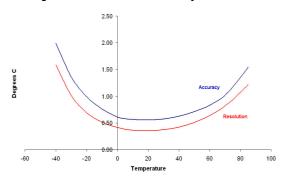

#### **Physical Specification**

**IP Rating** IP54 (splash-proof)

Operational Range\* -40°C to +85°C (-40°F to +185°F)

**Case Dimensions** 

Diameter 34mm / 1.34" Height 54mm / 2.13' Weight 50g / 1.8oz

#### **Notes**

SAFT LS14250 or LST14250; **Battery Type** 

Tekcell SBAA02P

The logger will operate with other ½AA 3.6V Lithium (Li-SOCI2) batteries but performance cannot be guaranteed.

Replacement Interval Every two years

Before replacing the battery the data logger must be stopped.

Data stored on the logger will be retained after a battery is

replaced.

If used at low temperatures the data logger should be allowed to warm to room temperature before it is opened to avoid condensation forming inside the unit.

#### Calibration

This unit is configured to meet Gemini's quoted specification during its manufacture.

We recommend that the calibration of this unit should be checked annually against a calibrated reference meter.

A UKAS traceable certificate of calibration can be supplied for an additional charge either at the point of purchase, or if the unit is returned for a service calibration.

#### **Approvals**

This equipment complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause any harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

This product is manufactured by Gemini Data Loggers (UK) Ltd to BS EN ISO9001:2000 (Certificate No. 6134).





# Required and Related Products

To use this data logger you will also require:

SWCD-0040: Tinytag Explorer software

SW-1500: Easyview Light software

SW-0500: Easyview Pro software

CAB-0005: Tinytag Transit / Tinytalk PC Serial Download Cable

Further related products:

CAB-USB: USB to Serial Converter SER-9510: Tinytalk Service Kit

<sup>\*</sup>The Operational Range indicates the physical limits to which the unit can be exposed, not the reading range over which it will record.